 
 


Koš

 
Wire - Č.1852

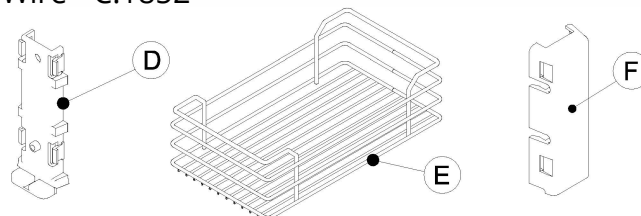



Deluxe - Č.1852W

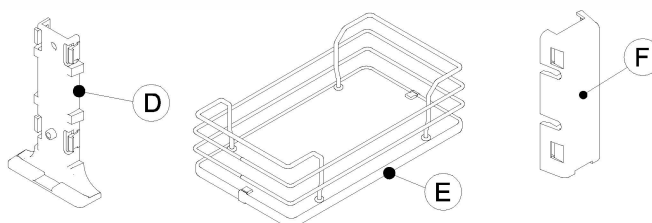

Elite - Č.1852E

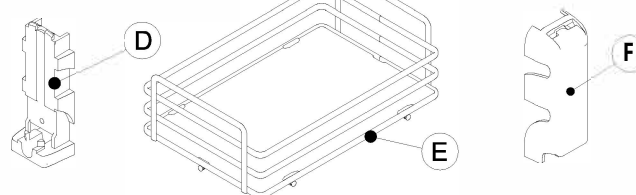


Helios - Č.1852H

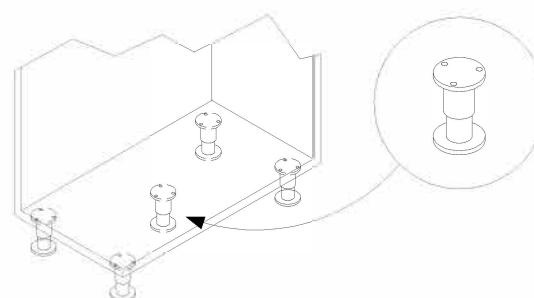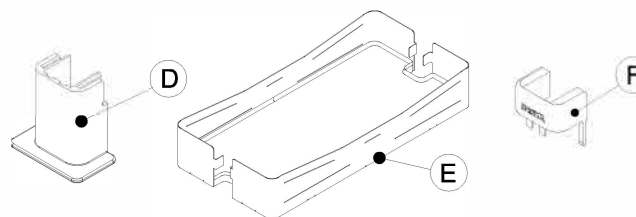  


Doporučujeme použití centrální nožky.

 
1

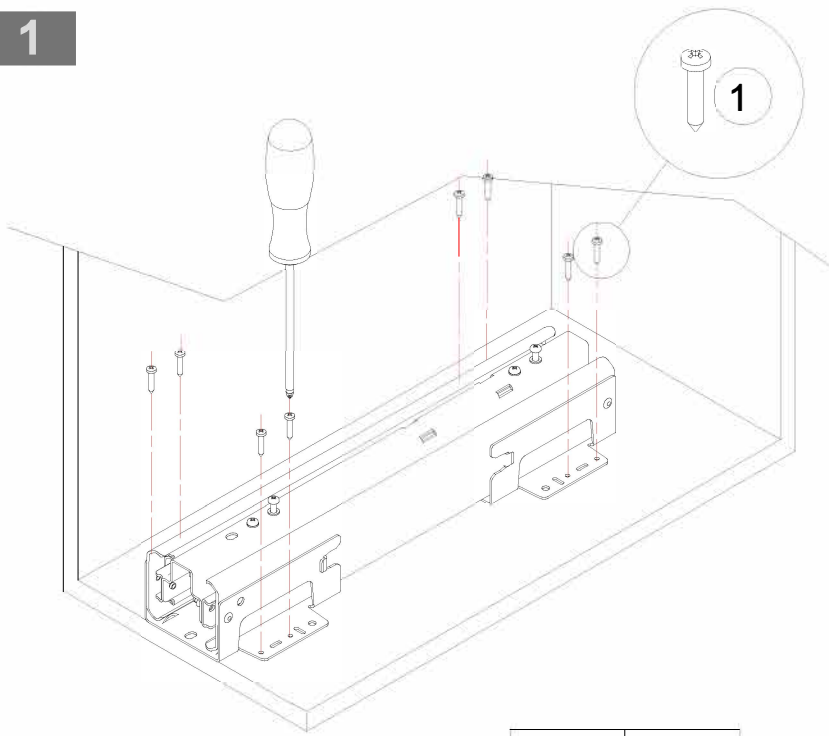


| L [mm] | A [mm] |
|--------|--------|
| 300 | 90 |
| 400 | 140 |
| 450 | 165 |
| 500 | 190 |
| 600 | 240 |




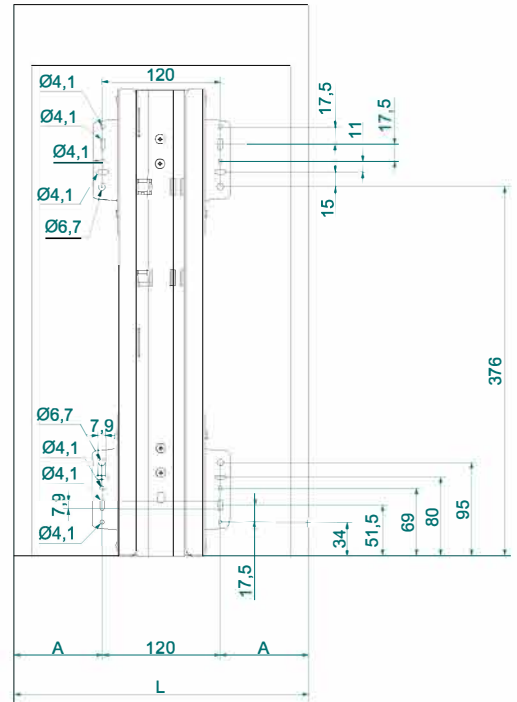 


2

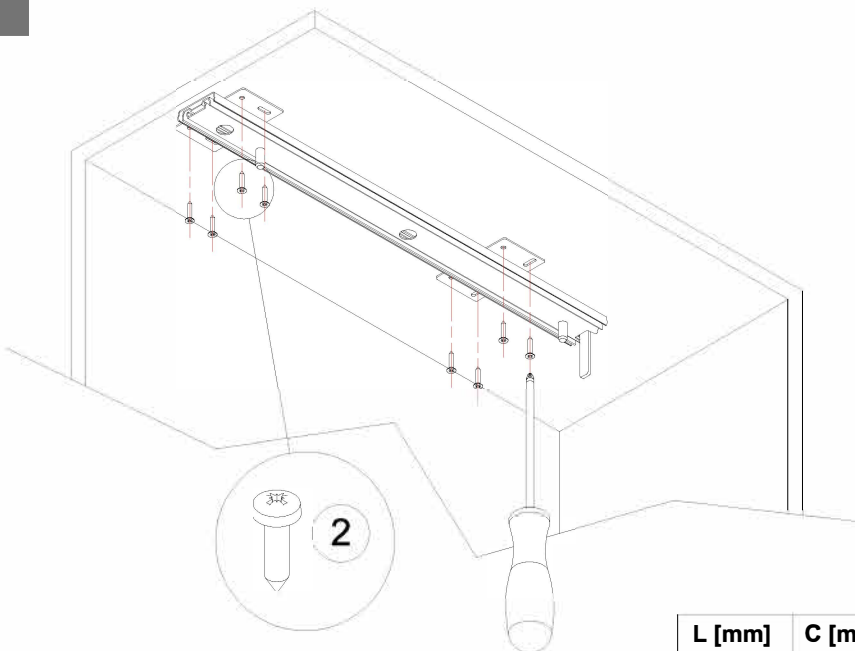 


| L [mm] | C [mm] |
|--------|--------|
| 300 | 118 |
| 400 | 168 |
| 450 | 193 |
| 500 | 218 |
| 600 | 268 |

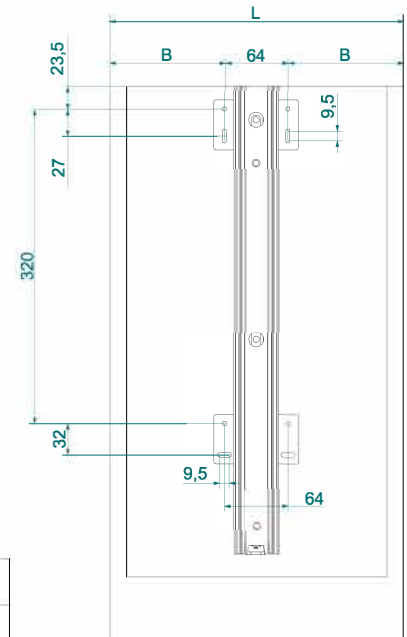 


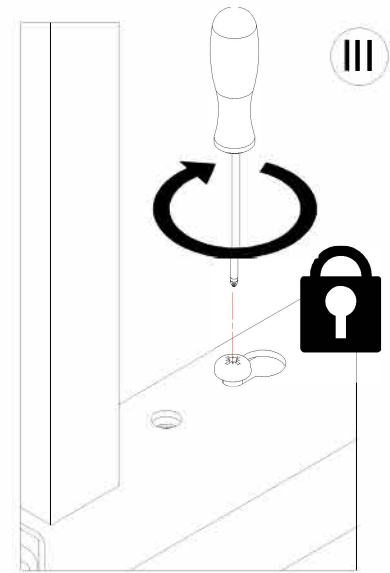 
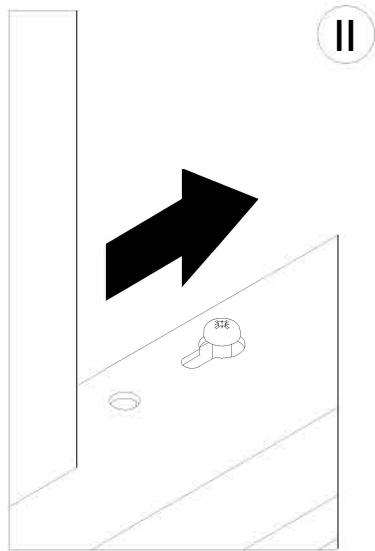 
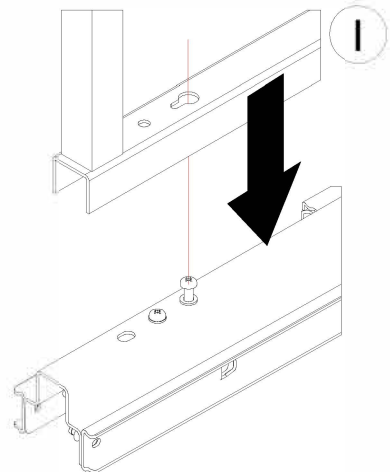 
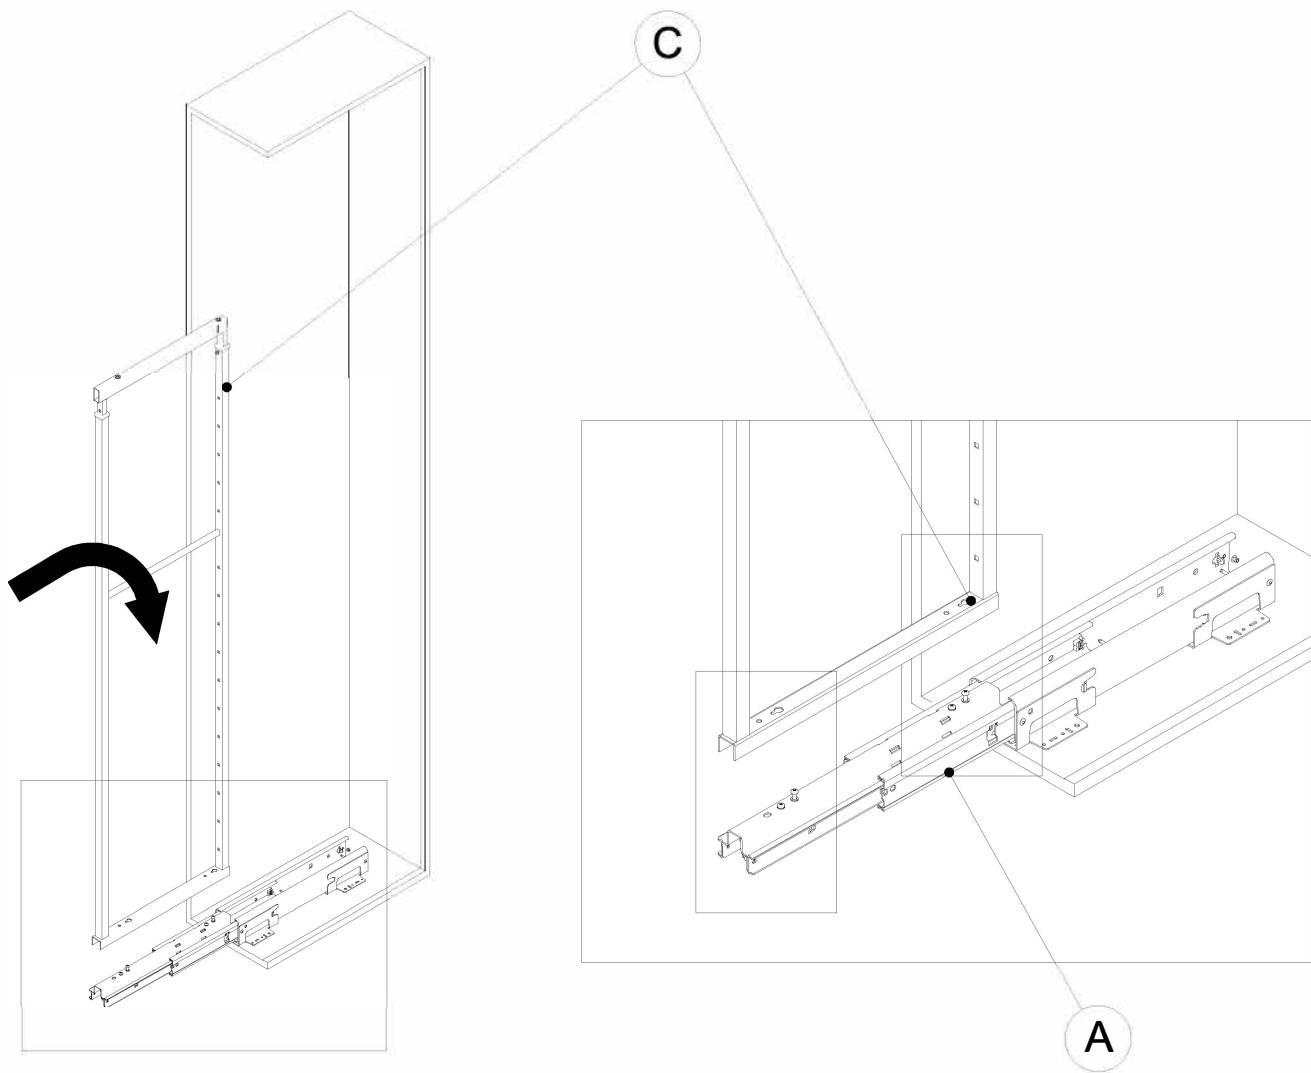 


4



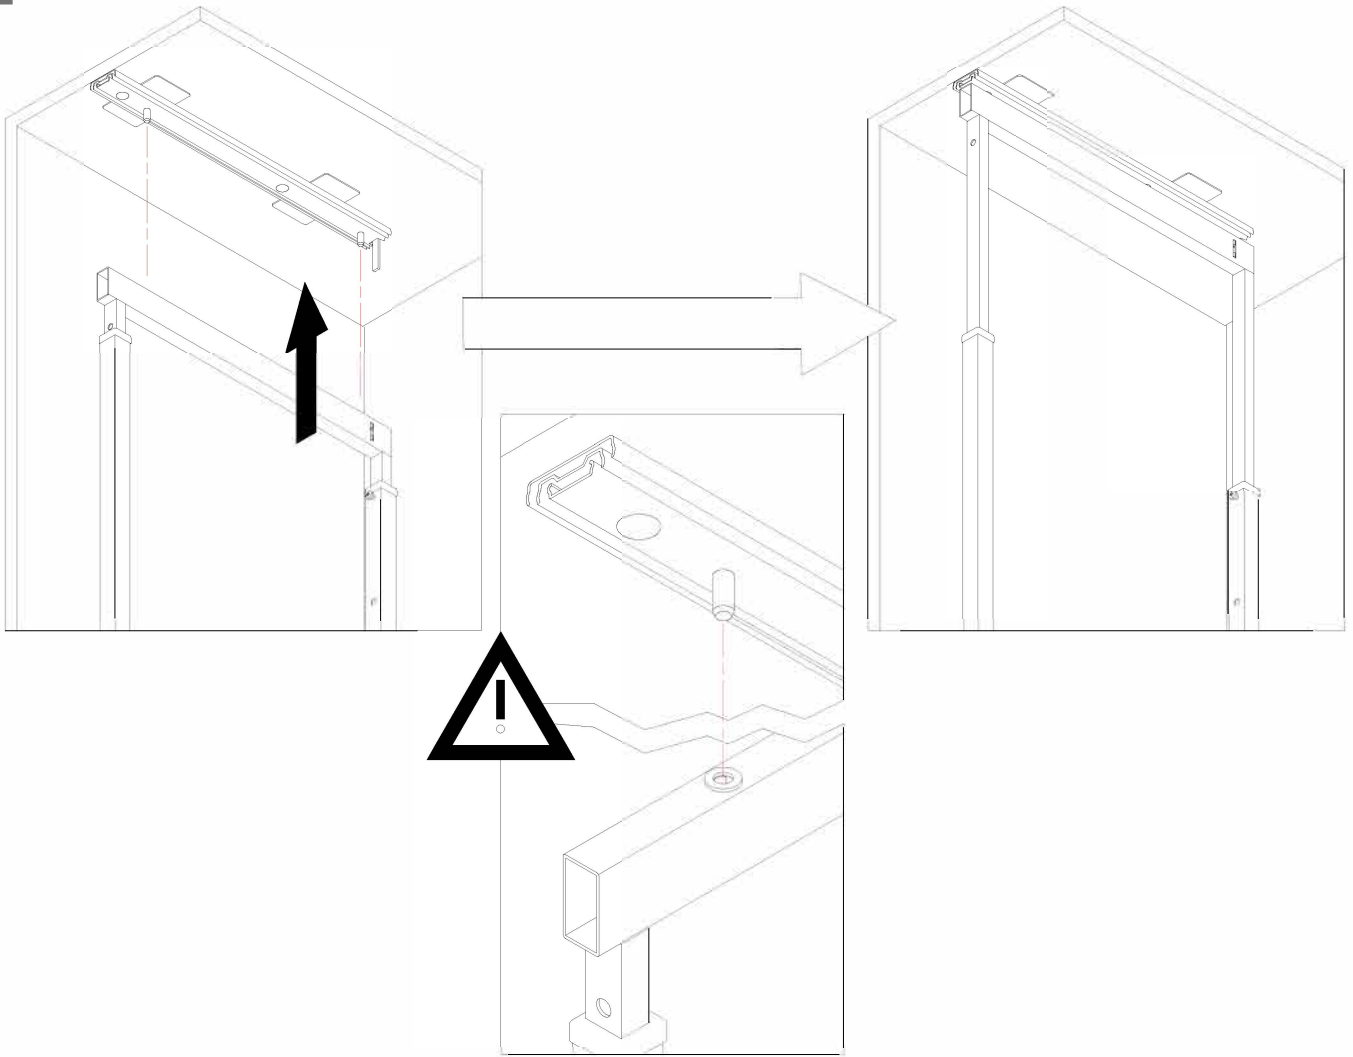 


5



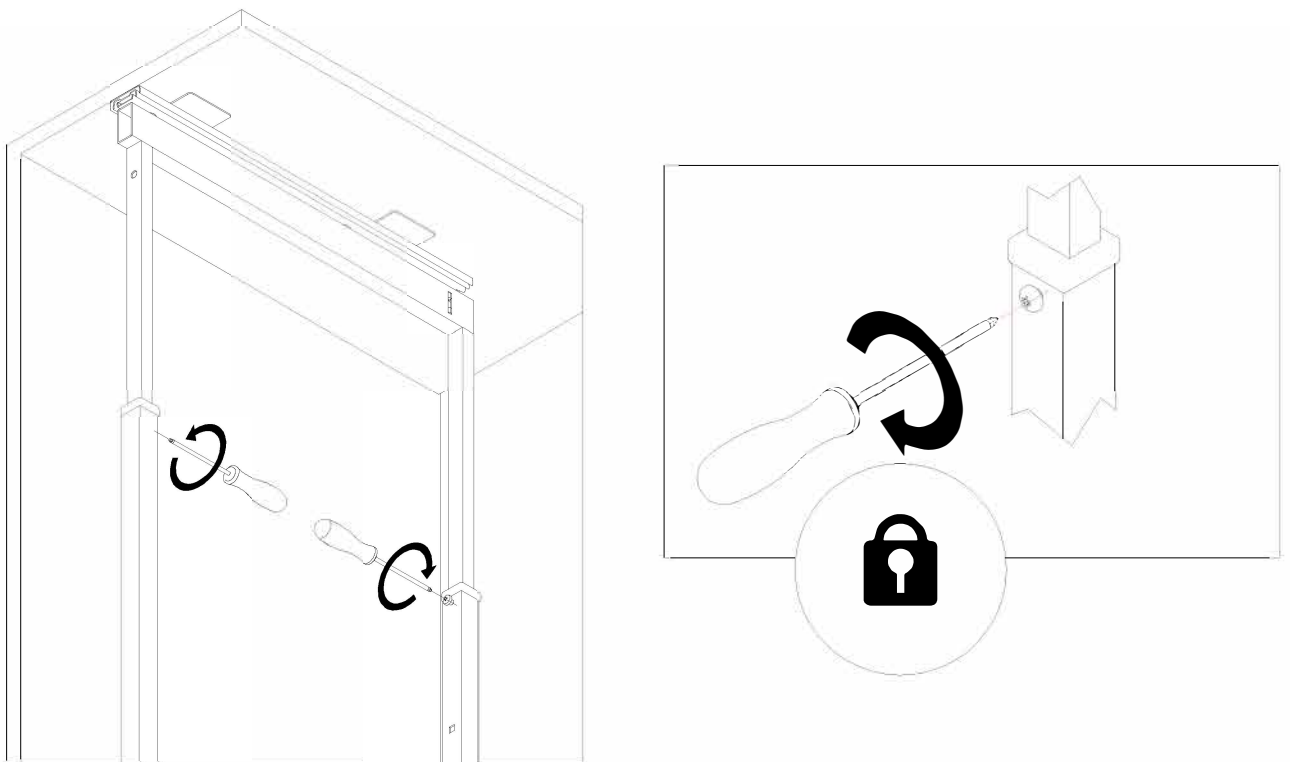 


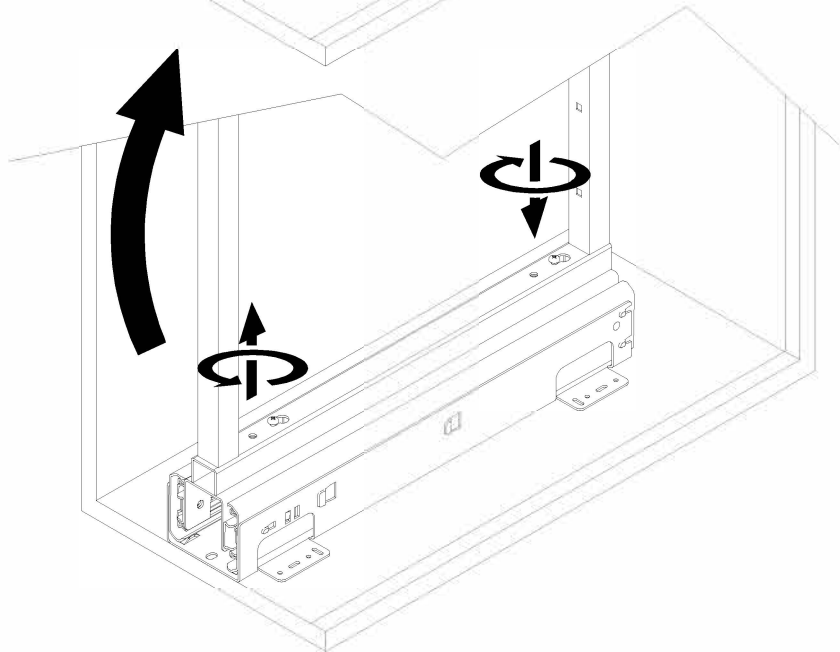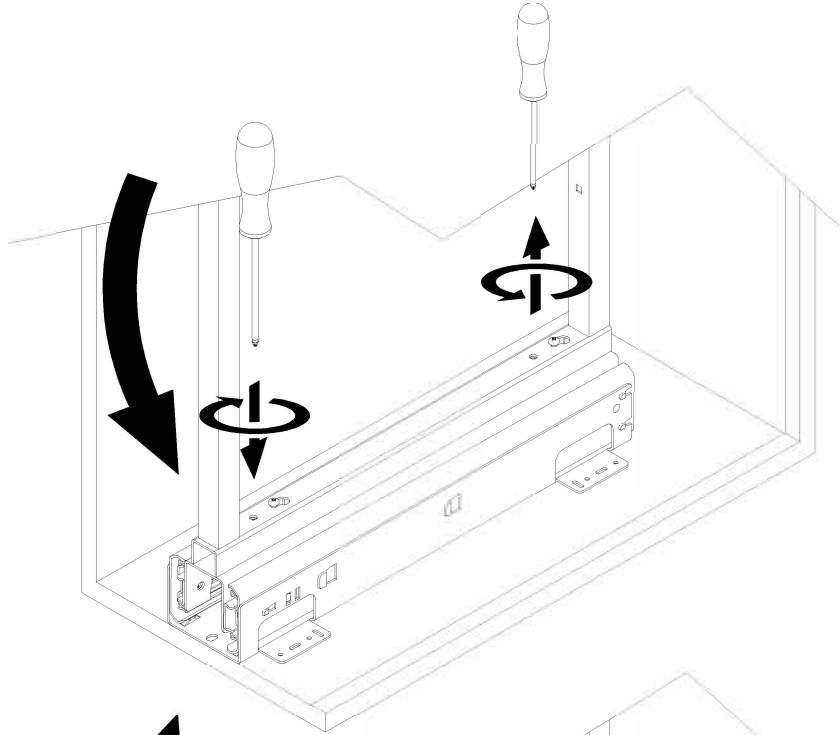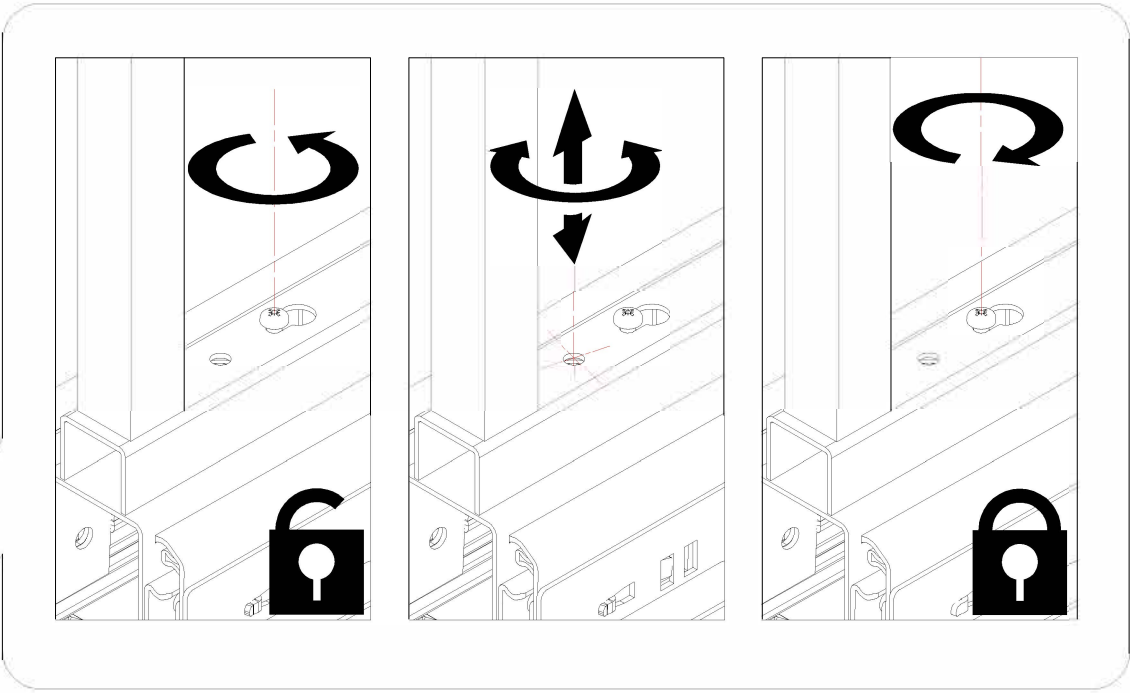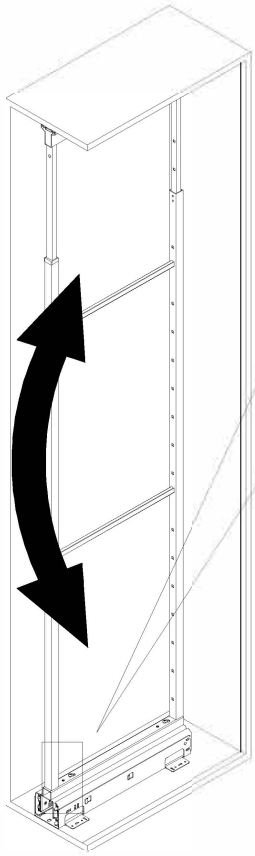    

Sestavení koše Č. 1852 - 1852W

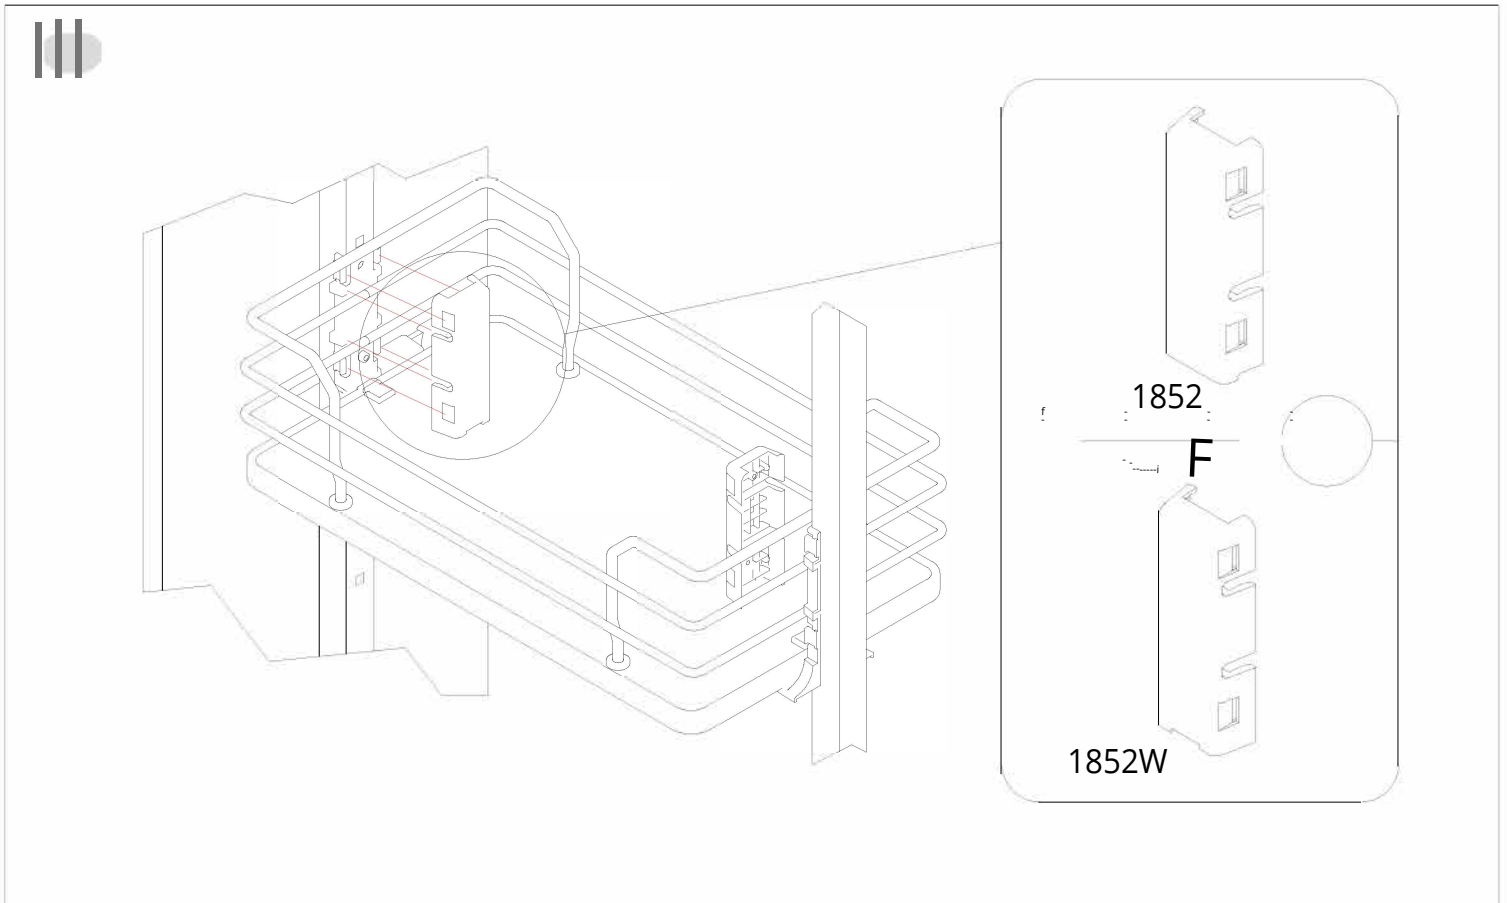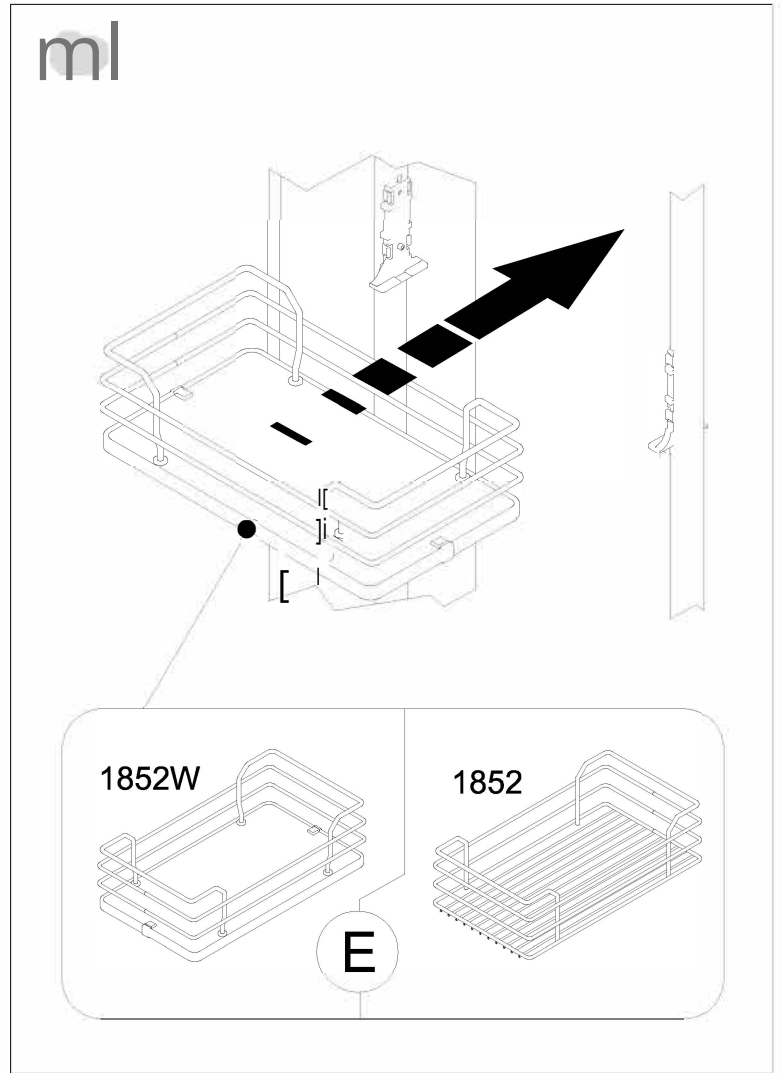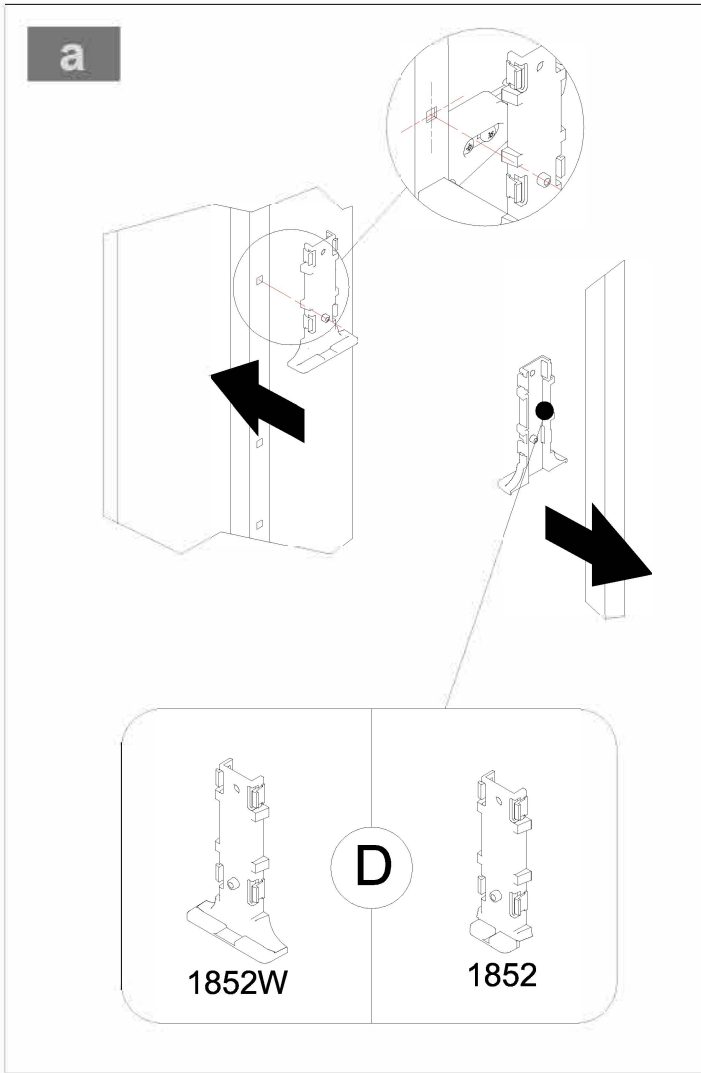   

Sestavení koše Č. 1852E

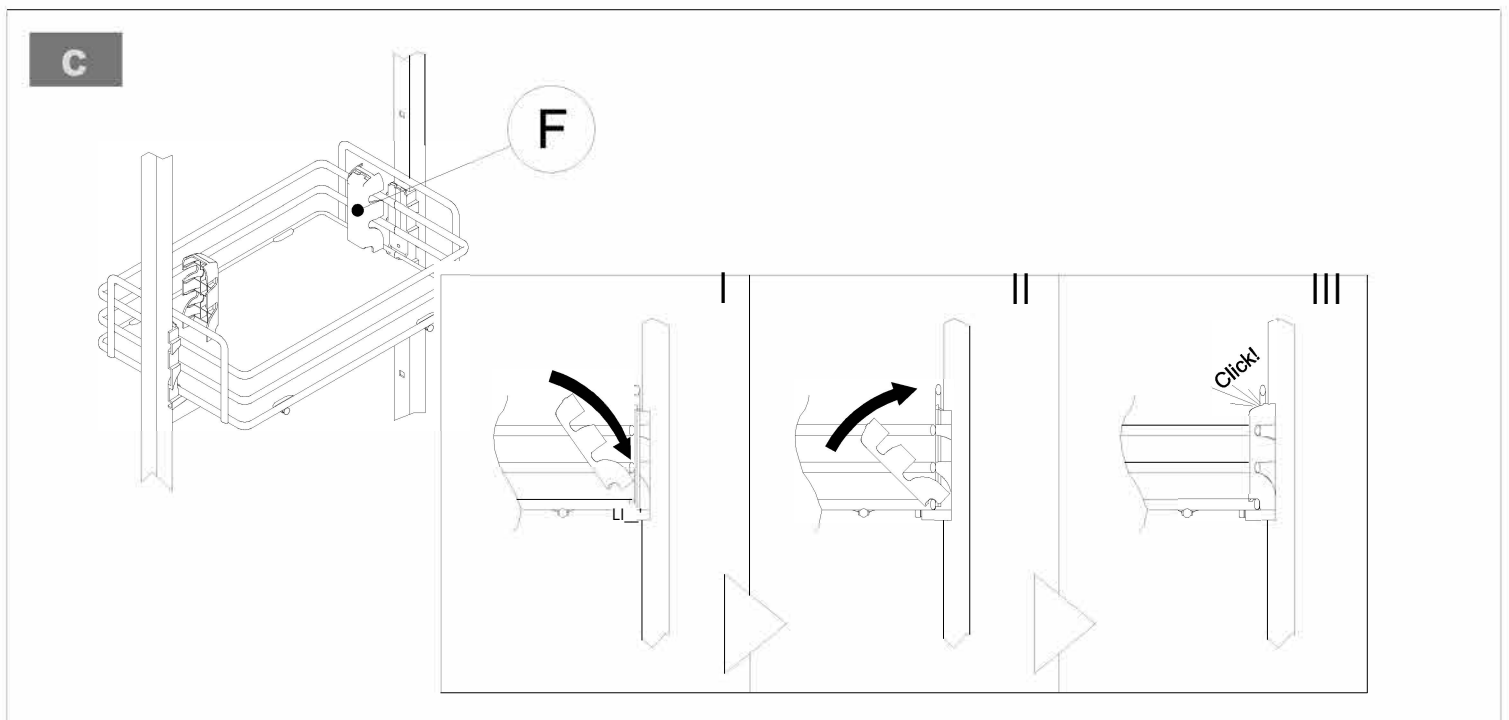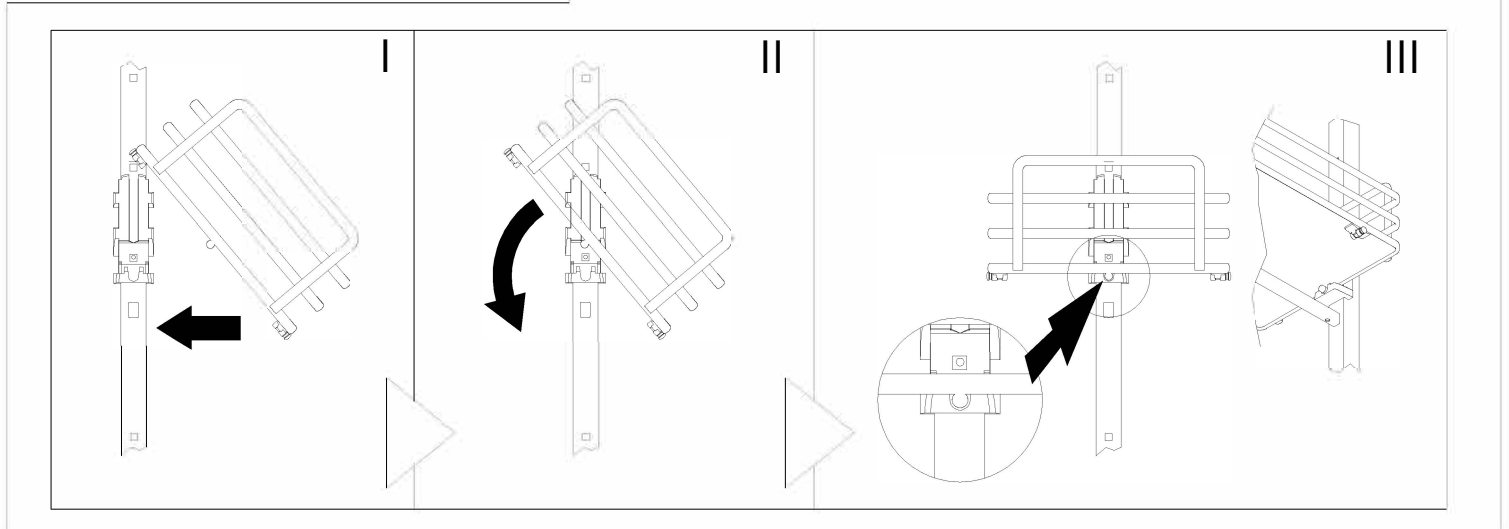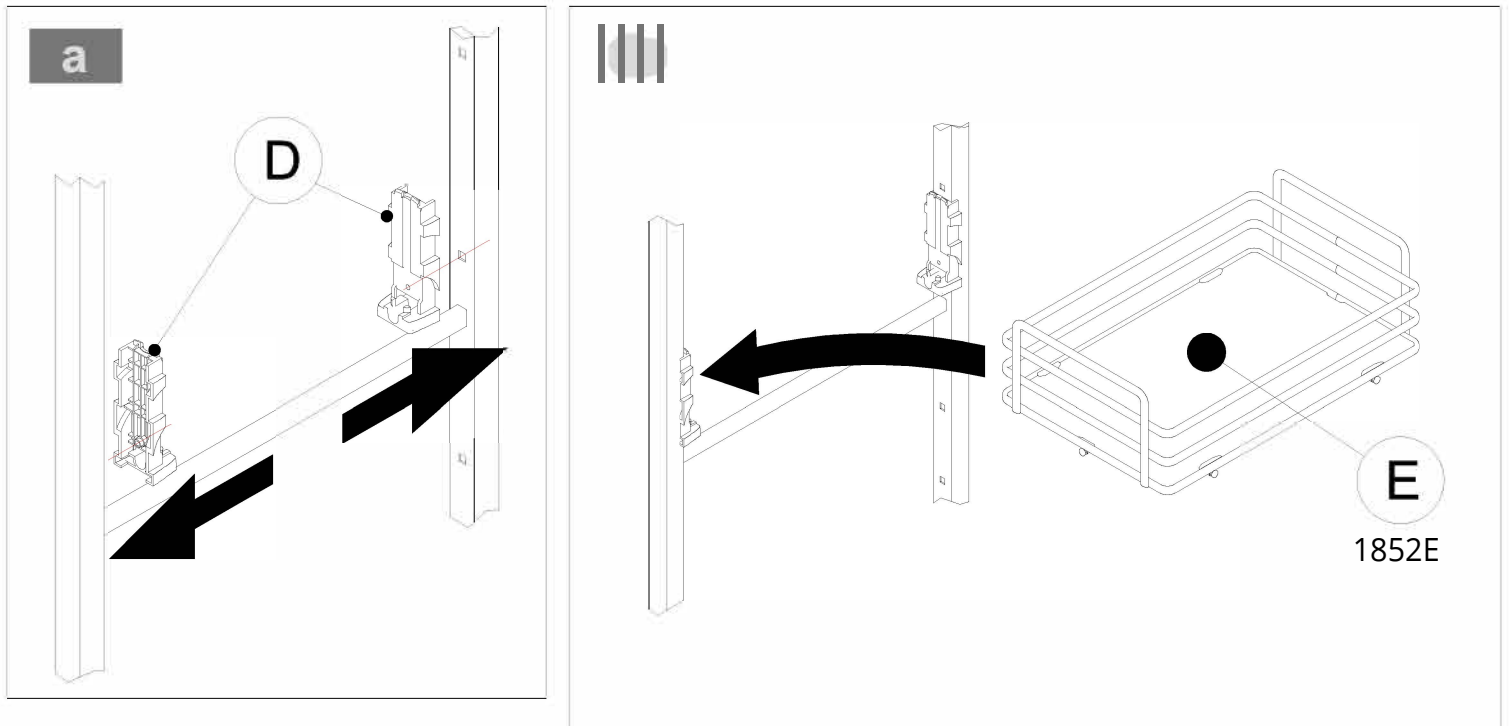   

Sestavení koše Č. 1852E

