


### TANDEMBOX antaro - vnitřní zásuvka výšky „D“

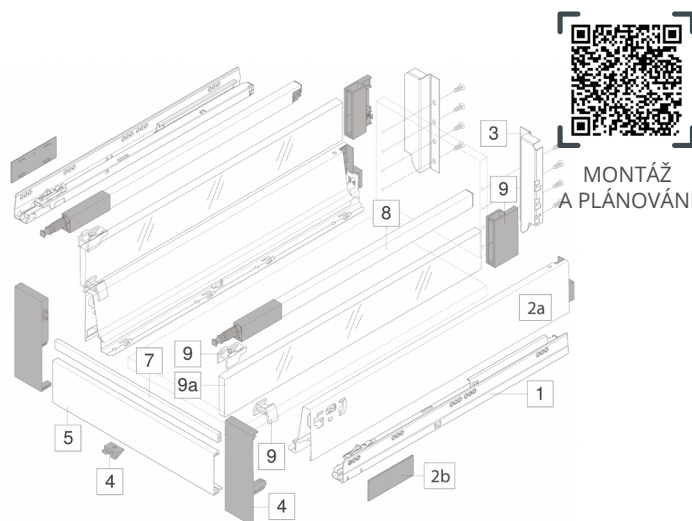

MONTÁŽ  
A PLÁNOVÁNÍ

#### Korpusové lišty

DÉLKA (MM) / NOSNOST (KG)	30	65
270	<b>104569</b>	-
300	<b>347811</b>	-
350	<b>099077</b>	-
400	<b>046031</b>	-
450	<b>046839</b>	<b>640657</b>
500	<b>031859</b>	<b>360934</b>
550	<b>046841</b>	<b>195950</b>
600	<b>658302</b>	<b>625560</b>
650	-	<b>368244</b>



#### Bočnice



DÉLKA (MM) / BARVA	BÍLÁ		ŠEDÁ		ČERNÁ
	LEVÁ	PRAVÁ	LEVÁ	PRAVÁ	
270	<b>551825</b>	<b>551826</b>	<b>511660</b>	<b>511661</b>	<b>460260</b>
300	<b>551827</b>	<b>551828</b>	<b>511666</b>	<b>511667</b>	<b>497474</b>
350	<b>532892</b>	<b>532893</b>	<b>511674</b>	<b>511675</b>	<b>497475</b>
400	<b>532894</b>	<b>532895</b>	<b>511678</b>	<b>511679</b>	<b>356962</b>
450	<b>468387</b>	<b>468388</b>	<b>470498</b>	<b>470500</b>	<b>379206</b>
500	<b>468389</b>	<b>468390</b>	<b>470503</b>	<b>470504</b>	<b>289776</b>
550	<b>532896</b>	<b>532897</b>	<b>529007</b>	<b>529008</b>	<b>497476</b>
600	<b>551829</b>	<b>551830</b>	<b>551831</b>	<b>551832</b>	<b>497478</b>
650	<b>551833</b>	<b>551834</b>	<b>551835</b>	<b>551836</b>	<b>289782</b>


#### Krytky

BARVA	KÓD
bílá	<b>492376</b>
šedá	<b>492378</b>




#### Držák zad

BARVA	KÓD
bílá	<b>289783</b>
šedá	<b>040594</b>
černá	<b>289784</b>

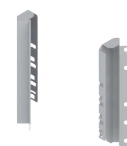

#### Držák čela pro vnitřní zásuvku


BARVA	KÓD
bílá	<b>460302</b>
šedá	<b>460301</b>
černá	<b>512392</b>

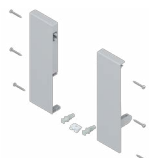

#### Přední díl bez drážky

> délka: 1 036 mm

BARVA	KÓD
bílá	<b>289793</b>
šedá	<b>460300</b>
černá	<b>289794</b>

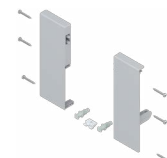

#### Příčný reling

> délka: 1 046 mm

BARVA	KÓD
bílá	<b>289832</b>
šedá	<b>460287</b>
černá	<b>289833</b>



#### Podélný reling

> balení obsahuje pravý a levý reling s přičytkami

DÉLKA (MM) / BARVA	BÍLÁ	ŠEDÁ	ČERNÁ
270	<b>460275</b>	<b>460274</b>	<b>550000</b>
300	<b>460277</b>	<b>460276</b>	<b>550002</b>
350	<b>493620</b>	<b>493621</b>	<b>550003</b>
400	<b>460279</b>	<b>460278</b>	<b>528741</b>
450	<b>460281</b>	<b>460280</b>	<b>550004</b>
500	<b>460283</b>	<b>460282</b>	<b>512394</b>
550	<b>468378</b>	<b>468379</b>	<b>468380</b>
600	<b>468382</b>	<b>468381</b>	<b>468383</b>
650	<b>460285</b>	<b>460284</b>	<b>468384</b>



#### Držák zásuvného prvku

BARVA	KÓD
bílá	<b>460309</b>
šedá	<b>460308</b>
černá	<b>512409</b>

